

NAVIGATING I_SITE

TOP NAVIGATION BAR

Top navigation bar is the main means of moving around I_SITE and accessing various features and reports. The picture below shows the most advanced view with all features and roles enabled. Clicking on the icon will load the default report or function in a given module and load a side bar which shows all reports and features available in the module.

The screenshot shows the top navigation bar of the I_SITE interface. It includes the TOYOTA logo, the text 'MATERIAL HANDLING', the 'I_Site' title, a star icon, a user profile icon labeled 'Fleet Manager', and a help icon. Below these are seven main navigation icons: Home, Utilization, Shocks, Pre-Op. Check, Manage Site, Administration, and My Fleet. A table below lists the descriptions for each of these modules.

Home	Dashboard
Utilization	View site, machine, driver and contract utilization, check battery status, view driver, machine and battery activity
Shocks	View shocks on the machine, view shocks associated with drivers, comment shocks
Pre-Op. Check	Manage pre-op checklists, view pre-operation checklist reports, manage messages, view message reports
Manage Site	Create driver groups, create machine groups, configure machines, manage drivers
Administration	Manage user access
MyFleet	Information about fleet composition, cost and service

SIDE BAR

All modules have a sidebar with additional reports and functions that can be accessed. These are described in a section corresponding to each module. Clicking on the report / function name in the side bar will load the report / function window.

The screenshot shows the side bar and main content area of the I_SITE interface. The side bar is on the left, with 'Utilization' selected. The main content area shows the 'Utilization - Machines' report for 'Demo Warehouse R3 Warsaw'. It includes search filters for Machine, Fleet Number, From date (27/01/2018), and To date (26/02/2018). There is also a checkbox for 'Include Historical Data' and a dropdown menu for 'Select machine groups' with 'Machine Groups' selected. Search and Clear buttons are at the bottom right.

MAINTENANCE NOTICE

Notifications of planned maintenance and other web service information are posted above the top navigation bar.

The screenshot shows the top navigation bar of the I_SITE interface with a maintenance notice displayed. The notice is a yellow circle with an exclamation mark, followed by the text: 'New layout release 28/2 12:45CET Expected downtime 30 minutes. See Help section!'. The rest of the navigation bar is the same as in the previous screenshot.

HELP

To access additional support materials, e-learning or to download smart access application and files click on help in the top right corner of the web portal.

TOYOTA

MATERIAL HANDLING

I_Site

★ |  Fleet Manager



Home



Utilization



Shocks



Pre-Op. Check



Manage Site



Administration



My Fleet



Help

LOGOUT

To logout click on the user name in the upper right corner of the web portal. It will expand a drop down menu. Click logout and close the browser window to end session.

TOYOTA

MATERIAL HANDLING

I_Site

★ |  Fleet Manager



Home



Utilization



Shocks



Pre-Op. Check



Manage Site



Administration




My Fleet

Settings

Logout

TERMS OF USE

To view the current terms of use click on the link in the bottom right corner of the web portal.

 Machine Demo14	Fleet No Demo14	Utilization 21.10%	Run Hours 35:27	Shocks 0	BSI N/A	▼
--	---------------------------	------------------------------	---------------------------	--------------------	-------------------	---

© 2018 - Toyota Material Handling Europe

[Terms of use](#)